

WISCO 560 TIMER SERVICE KIT
KIT #0017441SK

TOOLS NEEDED:

Phillips Screwdriver
Straight (or flat) Screwdriver
1/2" Nut Driver or Wrench

PARTS INCLUDED:

Timer - Part #0017441

Installation Instructions:

- 1) Unplug oven from outlet and let cool
- 2) Pull timer knob off timer shaft. You may need to use the screwdriver to "pry off the knob".
- 3) Using the 1/2" nut driver (or wrench) remove the timer nut and set aside the timer dial.
- 4) Around the right side of the unit locate the access panel. Remove the 4 screws holding on the access panel. Remove the access panel and set aside.
- 5) Pull the timer through the access panel.
- 6) Remove wire L1 positioned on the old timer. Reattach wire L1 to the new timer.
- 7) Remove wire T1 positioned on the old timer. Reattach wire T1 to the new timer.
- 8) On the timer bell find the word "TOP" and position the timer so the "TOP" side is facing up (the top).
- 9) Reattach the replacement timer to the front panel. Reattach the timer dial. Tighten the nut down with the nut driver (or wrench).
- 10) Plug unit in. Unit is now ready for operation.

FS140073
Rev. 02-15-12
Sales Drive/FS#