

INSTRUCTIONS

PIZZA OVEN ELEMENT ASSY. REPLACEMENT


*UNDER NO CIRCUMSTANCES IS THE OVEN TO BE PLUGGED IN DURING REPLACEMENT.

1. REMOVE CLEAN-OUT TRAY.
2. PLACE OVEN ON ITS TOP WITH FRONT FACING YOU.
3. LOOSEN SCREWS HOLDING IN BOTTOM.
4. REMOVE BOTTOM.
5. PULL UP INNER HOUSING TO EXPOSE TOP TINNERMAN NUTS.
6. REMOVE TINNERMAN NUTS.
7. LOOSEN NUT AND REMOVE WIRES ATTACHED TO RESISTANCE WIRE ELEMENTS.
8. PUSH ASSEMBLY TO RIGHT FAR ENOUGH UNTIL SUPPORT RODS DROP. PULL IT BACK LEFT UNTIL WIRE ASSEMBLY IS COMPLETELY FREE.
9. PUT UNIT ASIDE AND REPLACE WITH NEW ELEMENT ASSEMBLY.

1. AFTER ASSEMBLY RODS HAVE BEEN INSERTED, SNAP ON TINNERMAN NUTS.
2. FASTEN ELEMENT WIRE ENDS (2) SNUGLY.
3. THEN REMOVE PLASTIC CLIPS.
4. REPLACE BOTTOM AND SCREWS.
5. TURN OVER OVEN AND REPLACE CLEAN-OUT TRAY.
6. YOU ARE NOW READY FOR COOKING PIZZA.

(SEE OTHER SIDE FOR SKETCH)

PLASTIC
CLIP

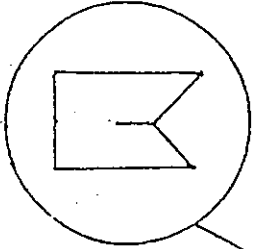

TINNERMAN
NUTS

